


SERVICE KIT INSTRUCTIONS

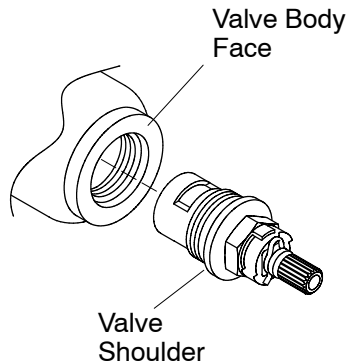

## Replacing The Ceramic Valve

- Turn off the water supply.
- Carefully remove the faucet handle.
- Use a 5/8" deep socket wrench to remove the ceramic valve without stripping the threads.
- Thread the new ceramic valve into the valve body until it is hand tight.
- If a torque wrench is available**, use a 5/8" deep socket to torque the new valve to 23-30 ft. lbs (31.2-40.7 Nm).
- If a torque wrench is not available**, thread the valve until the shoulder of the ceramic valve contacts the mating face of the valve body. Secure the valve with a wrench. Do not tighten more than 5° from the hand-tightened point.
  - CAUTION: Risk of internal leakage.** Do not overtighten. Overtightening may damage the ceramic valve and cause internal leakage.
- Turn on the water supply, and check for leakage.

USA: 1-800-4-KOHLER  
Canada: 1-800-964-5590  
Mexico: 001-877-680-1310  
[kohler.com](http://kohler.com)

© 2005 Kohler Co.

1041157-9-A